


Water Level Indicator

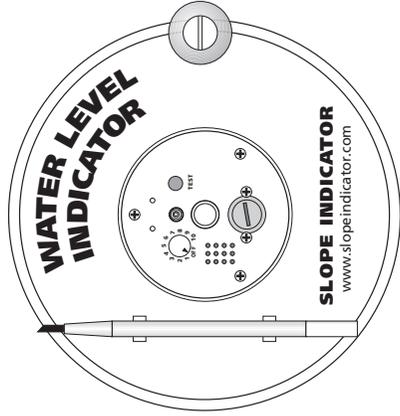

Indicator Controls

On/Off/Sensitivity: The on/off switch also adjusts sensitivity. Sensitivity is set properly if beeper and light turn off immediately when probe is removed from contact with water. Use lower setting for very conductive water or to eliminate false triggering. Use higher setting for less conductive water.

Battery Test Button: Push the button to check the batteries. Light and beeper activate when batteries are good.

Replacing Batteries

The indicator uses two AA-size batteries. Press Test button to check batteries. Replace batteries if light and beeper do not activate.

1. Use coin or screwdriver to open battery holder. (1/4 turn counter-clockwise)
2. Remove the two AA batteries. Insert new batteries with + terminals up, toward the cap.
3. Replace cap.

Cleaning the Indicator

Probe: Wash probe with detergent.

Reel: Wipe off the reel with a damp cloth. Do not immerse in water.

Cable: Wash the cable with a laboratory-grade detergent such as Alconox or Liquinox. Rinse with distilled water as required. Remove oily deposits with dish-washing detergent. Do not leave the cable immersed in detergent for a long time. Rinse in distilled water.

Do not use nitric acid, hydrochloric acid, MEK, Acetone, Toluene, or alcohol to clean the cable. Even short-term exposure to these substances can damage the polyurethane cable jacket.

Taking Readings

1. Switch on. Set sensitivity to 5 or 6.
2. Lower probe into well. When probe touches water, light turns on and beeper sounds.
3. Read depth to water from cable mark that aligns with your reference (such as the top of the well).
4. Switch off.

Reading Cable Marks

Cable is graduated with 1/100 ft marks. White numbers are 1/10 ft. Yellow numbers are feet. Read as shown below:



- ▲ 21.9 ft ▲ 22.0 ft ▲ 22.1 ft

Repairs

If your water level indicator is damaged, you can order replacement parts to fix it yourself or you can return it to the factory for repair.

To order replacement parts, please visit www.slopeindicator.com. Click on Support, then click on Water Level Indicator Parts.

To return the water level indicator to the factory for repair, contact the Slope Indicator factory for a return authorization:

Tel: 425-493-6200

Fax: 425- 493-6250

Email: solutions@slope.com

Check that the indicator is clean and dry, then package it, write the return authorization number on the outside, and send to:

Slope Indicator
12123 Harbour Reach Drive
Mukilteo, WA, USA
98275

Limited Warranty

Slope Indicator warrants all products manufactured by it to be free of defects of workmanship and material for a period of one year from the date of delivery to the customer, unless the customer is an authorized distributor of Slope Indicator products, in which case the warranty shall be for a period of one year from the date of delivery to the authorized distributor's customer. The obligation of Slope Indicator Company is hereafter limited to replacement or, at its option, repair of products returned to it with transportation charges to and from the Company paid by the customer (including prepayment of transportation charges to the Company) and which the company's examination shall disclose, to its satisfaction, were not free from such defects.

In no event shall Slope Indicator be liable for consequential or special damages, or for installation, adjustment or other expenses which may arise in connection with such products. This warranty extends only to the original customer of the company or its authorized distributor, as the case may be, and is expressly in lieu of all other warranties, express or implied, whether of merchantability or fitness for any particular purpose or use and of all other obligations and liabilities of any kind and character. Except for the warranty described on the face hereof, seller makes no warranty of merchantability of the goods or of the fitness of the goods for any purpose. There are no warranties which extend beyond the description on the face hereof.