

---

**1. PURPOSE**

- a) The purpose of this document is to provide instructions for changing the battery in the Eason controller.

**2. SCOPE**

- a) This instruction applies to Eason Model 1000.

**3. RECORDS**

- a) NA

**4. ASSOCIATED DOCUMENTS**

- a) NA

**5. DEFINITIONS**

- a) NA

**6. RESPONSIBILITY**

- a) The Supervisor of the Stone Mountain Assembly Department is responsible for maintaining these instructions.
- b) It is the responsibility of the assembly supervisor to train all personnel responsible for assembly and verification testing of this pump in the proper use of the equipment and procedures associated with these instructions.

**7. TOOLS, GAGES, FIXTURES**

- a) Replacement 3 volt lithium battery (CR2032)
- b) Phillips screw driver

**8. SAFETY REQUIREMENTS**

- a) NA

**9. INSTRUCTIONS**


- a) Instructions start on the next page.



1 - Remove four screws from cover.




2 - Remove the keyboard section from main housing.

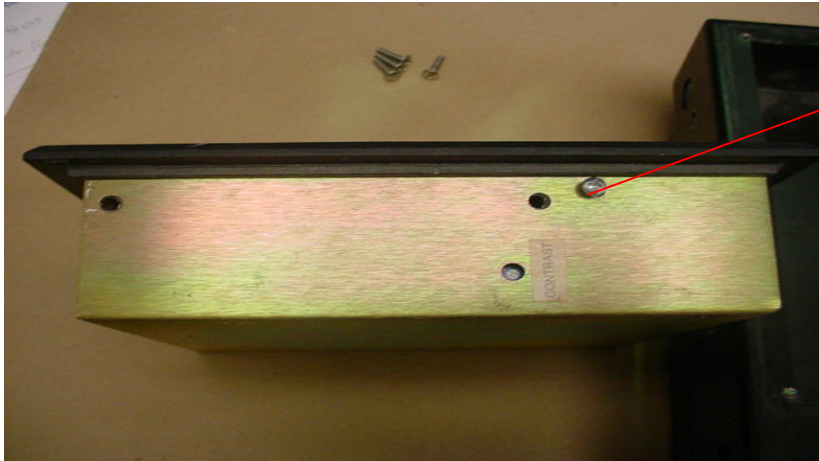

3 - Remove screws from keyboard housing.



4 - Separate cover, exposing circuit board.

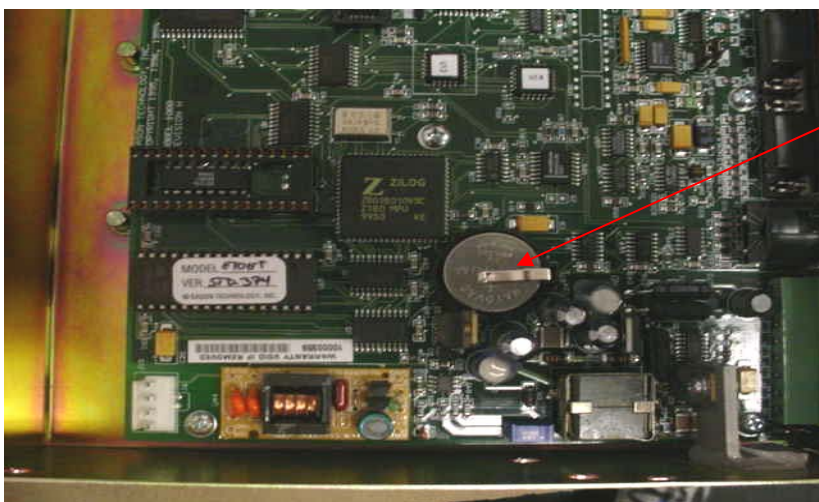

5 - Remove battery from underneath brace.



6 - Replace with 3 volt lithium battery (CR2032) using correct polarity. Markings are on the top side.

7 - Reassemble controller.

## 10 ) VERIFICATION

10.1 --Turn the unit on and verify that the display lights up.