

# Quick Connect

## Installation Guide

Pn's 604068, 604069


- 1 If the pump is new, remove the foam float supports as described in the SRX Quick Start guide.

Remove the red pipe plug from the air valve.



- 2 Remove 12 inches of the outer sheathing from the tubing and cut the discharge tube 5 inches shorter than the air and exhaust lines.

If using adapters, measure and cut ends to the base of the hose barbs.

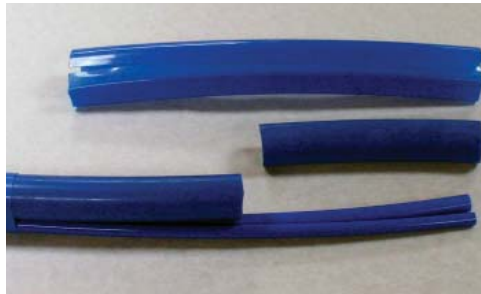


- 3 Install the three quick connects into the tubing. Make sure that all the windowed cut outs are pointing outward (toward the well casing).



- 4 Install the discharge quick connect (the large one) and tubing to the pump.

Align the window on the quick connect fitting to the groove on the fitting.

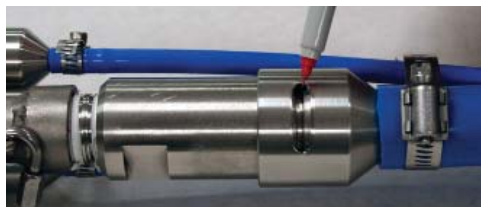

- 5 Insert the shear wire into the discharge quick connect. Leave about 1.5 inches of excess on each end for future reuse.



- 6 Cut the shear wire. Leave about 1.5 inches of excess on each end for future reuse.



- 7 Repeat steps 4-6 for the remaining two quick connects.

- 8 Flatten each end of the shear wire with pliers or similar tool on all three of the quick connects.



- 9 When removing, cut the wire as close to the crimp as possible for future reuse.





Kit #604068

Parts List  
Kit #604068

Item	Description	Qty
07330125	Nylon Rod	3.5 ft
2404018	O-Ring	4
2404029	O-Ring	2
602085	Hose Clamp, 7/32 - 5/8 in	3
602086	Hose Clamp, 13/16 - 1 1/2 in	2
603863	Quick Connect, 1 inch ID tubing	1
603864	Quick Connect, 3/8 inch ID tubing	1
603865	Quick Connect, 1/4 inch ID tubing	1



Kit #604069

Parts List  
Kit #604069

Item	Description	Qty
07330125	Nylon Rod	3.5 ft
2404018	O-Ring	4
2404029	O-Ring	2
602085	Hose Clamp, 7/32 - 5/8 in	3
602086	Hose Clamp, 13/16 - 1 1/2 in	2
603864	Quick Connect, 3/8 inch ID tubing	1
603866	Quick Connect, 1/2 inch ID tubing	1
603867	Quick Connect, 3/4 inch ID tubing	1